

# BATTERY LOW FUNCTION UPDATE

## Introduction

This document's purpose is to solve the alarm system make "di, di, di" sound and freeze without reason

This document can make user to know how to turn on/off the sensor's low voltage functions.

## LCD alarm system G70/GSM800 series

At working status (no program status):

811+ENT	Enable sensor low voltage reminding sound.
812+ENT	Disable sensor low voltage reminding sound.
821+ENT	Enable sensor low voltage upload function (to CMS)
822+ENT	Disable sensor low voltage upload function (to CMS)
831+ENT	Enable external power off reminding function
832+ENT	Disable external power off reminding function

Note: After press "ENT" , the alarm system will make 0.5 seconds "Di" sound means setting is confirmed.

## LED alarm system G71 series

811+ENT	Enable sensor low voltage reminding sound.
812+ENT	Disable sensor low voltage reminding sound.
821+ENT	Enable sensor low voltage upload function (to CMS)
822+ENT	Disable sensor low voltage upload function (to CMS)

Default setting: Enable sensor battery low reminding sound, disable upload function, enable external power off reminding function.

Design and specifications are subject to change without notice.

Telephone: +086-755-28901540

E-mail: Sales@hkvstar.com



[www.hkvstar.com](http://www.hkvstar.com)